

## LA CROSSE TECHNOLOGY QUICK SET-UP INSTRUCTIONS

Please make sure that fresh batteries are installed properly in the receiver and the sensor.

**IMPORTANT!!** Do not set the time or press any other buttons until the display has communicated with the outdoor sensor for at least 10 minutes.

Use the “SET” button toggle through the menu options.

Use the “CH/+” button to change the menu options when they are flashing.

1. Press and hold the SET button for 3 seconds until the display contrast option (“LCD”) begins flashing. Press and release the CH/+ button to toggle the contrast level.
2. Press and release SET and the time zone begins flashing. Press and release CH/+ to select your time zone (“-5h” Eastern, “-6h” Central, “-7h” Mountain, “-8h” Pacific).
3. Press and release SET and RCC ON begins flashing. Press and release CH/+ to toggle between ON and OFF. Select OFF if you choose not to have automatic updates from the Atomic Clock.
4. Press and release SET and “12h” or “24h” will begin flashing. Press and release CH/+ to toggle between 12 or 24 hour time display.
5. Press and release SET and the hours will begin flashing. Press & release CH/+ to select the hour.
6. Press and release SET and the minutes will begin flashing. Press and release CH/+ to select the minutes.
7. Press and release SET and the year will begin flashing. Press and release CH/+ to select the year.
8. Press and release SET and the month will begin flashing. Press and release CH/+ to select the month.
9. Press and release SET and the date will begin flashing. Press and release CH/+ to select the date.
10. Press and release SET and the city code will begin flashing. Press and release CH/+ to select the proper city code for your area. (A list of cities and codes can be found inside your manual.)
11. Press and release SET and the snooze timer will begin flashing. Press and release CH/+ to select the snooze time period.
12. Press and release SET and the Fahrenheit or Celsius setting will be flashing. Press and release CH/+ to toggle between Fahrenheit (F) or Celsius (C).
13. Press and release SET and the forecast sensitivity setting will begin flashing. Press and release CH/+ to toggle between 1, 2 or 3 (default is 2).
14. Press and release SET to exit set-up.